How to install your Oval /Round Window

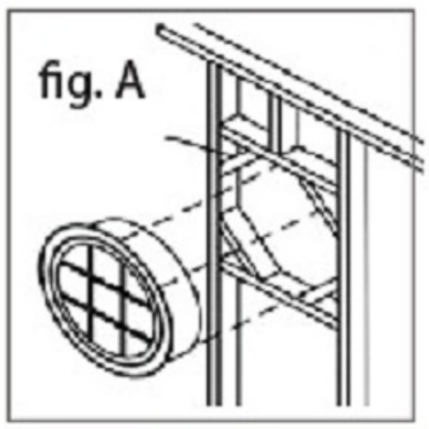

1. Frame opening to rough opening dimensions of unit,
2. Add corner braces so that the unit can be secure on all sides. (See fig. A)
3. Working from the outside, place unit into center of rough opening.

4. Before nailing unit in wall, apply a bead of caulk behind the mounting flange fin. (see fig B)

5. Nail into top of window nailing fin to temporarily hold unit into rough opening. Center unit in opening and shim if necessary before proceeding.
6. Secure unit with nails or screws in every hole of nailing fin. (see fig C)
7. Before installing or replacing exterior siding, apply a bead of caulk around the nailing flange. (see fig D)

note:
It is very important to apply a quality sealant to window unit.
We recommend you use Vulkem Sealant to seal your windows to the rough opening as well as to seal your choice of siding, brick, etc. to the frame on the outside Vulkem Sealant 116 one-part moisture curing, gun grade polyurethane sealant. It is durable, flexible and offers excellent performance in moving joints.
Vulkem 116 does not require a primer on most construction materials.

8. Cut siding to butt against main frame of unit.
9. Apply a bead of sealant around perimeter where it meets the siding, brick , or exterior material to finish off the window (see fig E)
10. After your drywall, or interior surface, is painted you can slip in the telescopic interior trim frame unit and use any type of adhesive (like Liquid Nails) to fasten the trim to the wall (see fig F)